Using the Fireplace

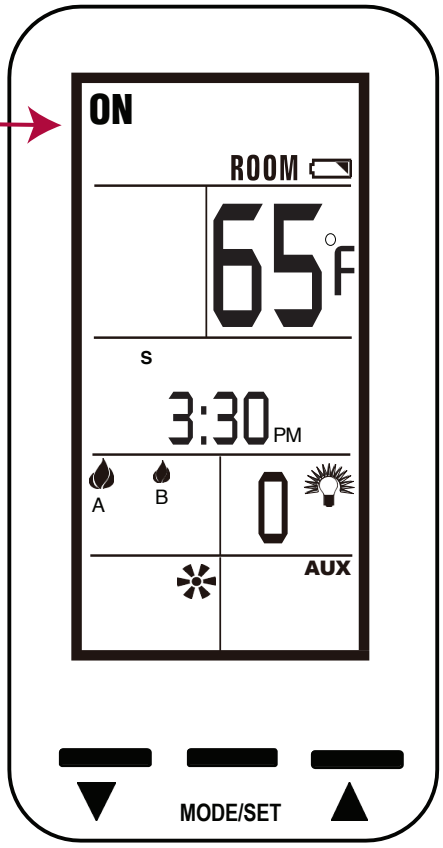

Turning Fireplace On

Press **MODE/SET** button once (do not press more than once).

"ON" will display to confirm command has been sent. Small Pilot Light will ignite followed by Main Fireplace Flame 1-2 minutes later.

Be Patient. There is delay between pilot light and fireplace flame.

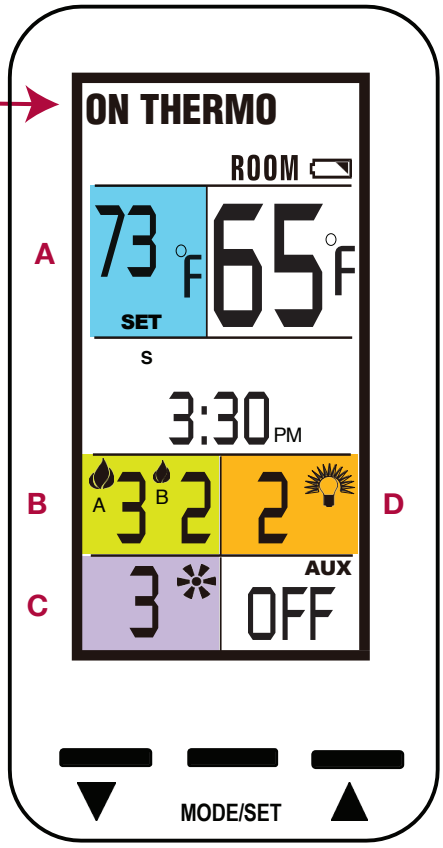

Fireplace Controls

A. Temperature Control: Once Fireplace Flame is on, press **MODE/SET** button one time to enter **THERMO** mode. **Note:** It will initially read "THERMO OFF" before automatically going into **"ON THERMO"** mode. In this mode you can control the heat setting as follows: Touch screen in temperature zone until it flashes. Use **arrow buttons** ▼▲ to set desired temperature. Press **MODE/SET** to confirm setting. Fireplace will now shut off / turn on to maintain set temperature.

B. Flame Height. Touch screen in Flame Zone until it flashes. Use **arrow buttons** ▼▲ to adjust flames (A, B) Press **MODE/SET** to confirm setting.

C. Fan Speed. Touch screen in Fan Zone until it flashes. Use **arrow buttons** ▼▲ to adjust fan Press **MODE/SET** to confirm setting.

D. Backlight. Touch screen in Light Zone until it flashes. Use **arrow buttons** ▼▲ to adjust lighting. Press **MODE/SET** to confirm setting.

Turning Fireplace Off

From ON THERMO Mode: Press **MODE/SET** once. **"OFF"** will display in upper right.

From ON Mode: Press **MODE/SET** twice (first press will cycle into thermo mode, second press will turn fireplace off) **"OFF"** will display in upper right.

!! IMPORTANT !!

Do not leave fireplace unattended in either ON or ON THERMO Modes. Please make sure it is set to "OFF" before leaving the room or the house. Thank you.

